

PENTAXTM

Optio Sv

(PC Connection Manual)

**Enjoying Your Digital
Camera Images
On Your PC**



Introduction

This booklet explains how to view the images you took with the PENTAX digital camera on your PC. Keep this manual in a safe place.

Regarding copyrights

Images taken using the Optio SV that are for anything other than personal enjoyment cannot be used without permission according to the rights as specified in the Copyright Act. Please take care, as there are even cases where limitations are placed on taking pictures even for personal enjoyment during demonstrations, industrial enterprise or as items for display. Images taken with the purpose of obtaining copyrights also cannot be used outside the scope of use of the copyright as laid out in the Copyright Act, and care should be taken here also.

Regarding trademarks

- PENTAX, Optio and smc PENTAX are trademarks of PENTAX Corporation.
- The SD logo  is a trademark.
- QuickTime and QuickTime logo are trademarks used under license. The QuickTime logo is registered in U.S. and other countries.
- All other brands or product names are trademarks or registered trademarks of their respective companies.
- This product supports PRINT Image Matching III, PRINT Image Matching enabled digital still cameras, printers and software help photographers to produce images more faithful to their intentions. Some functions are not available on printers that are not PRINT Image Matching III compliant. Copyright 2001 Seiko Epson Corporation. All Rights Reserved. PRINT Image Matching is a trademark of Seiko Epson Corporation. The PRINT Image Matching logo is a trademark of Seiko Epson Corporation.

Regarding PictBridge

PictBridge allows the user to connect the printer and digital camera directly, using the unified standard for the direct printout of images. You can print images directly from the camera through a few simple operations.

- Symbols used in this manual have the following meanings:

	Gives page numbers explaining related operations.
	Gives information that is useful to know.
	Gives cautions and notes about the operation.

The PC screenshots in this booklet may differ from your PC, depending on your model.

Contents

Enjoy Your Digital Camera Pictures and Movies on Your Computer	2
Preparations for Enjoying Your Digital Camera Pictures and Movies	4
Software Provided	4
System Requirements	5
Installing the Software (for Windows).....	8
Installing the Software (for Macintosh).....	13
Setting Up Your Digital Camera.....	16
Transferring Digital Camera Images and Movies	17
Transferring Images to a Windows PC	17
Transferring Images to a Macintosh	23
Viewing Images and Movies	25
Starting ACDSee for PENTAX.....	25
Displaying a List of Images and Movies	26
Viewing a Full-Size Image or Movie.....	33
Editing Images and Movies	36
Editing Images	36
Panorama Image Stitching	40
Editing Movies.....	46
Sharing Your Images and Movies	57
Printing an Image.....	57
E-mailing Your Images from ACDSee for PENTAX.....	61
Playing Your Movies Created with ACD Showtime! for PENTAX	62
Making the Most of ACDSee for PENTAX	63
Using Help	63
About ACDInTouch	64

Enjoy Your Digital Camera Pictures and Movies on Your Computer

You can use a computer to organize and edit the pictures and movies captured with your digital camera.

Direct Print


Connect your camera directly to a printer that is compatible with PictBridge using the USB cable, and print images.

☞ Camera Operating Manual (p.129)



View images on a TV

Connect your camera and TV with the AV cable to display images and movies on the TV.



☞ Camera Operating Manual (p.124)



Your computer is...


- equipped with a standard USB interface.
- using Windows 98/98SE/Me/2000/XP as your OS. Or Mac OS 9.2/10.1 or later.

Connect your camera to the computer with the USB cable to transfer the camera images.



Your computer is...

- using Windows NT, Mac OS 8.6.



Use your photo shop

You can have prints made from images recorded on your card at a photo shop.

- Set DPOF settings on your camera, and get prints from your photo shop.

☞ Camera Operating Manual (p.125)

- Select the images for prints.



You can transfer your images using a built-in card slot + PC card adapter or a card reader.


- Remove the card from the camera. When transferring images on the card to a computer with another device, make sure to review the user manual accompanying that device.

Use your image data

You can use your e-mail software to attach and send images and movies by e-mail, or post the images and movies on your website.




- See the operating manual of your e-mail software for details on how to make attachments to e-mails.
- See the operating manual of the software you are using for details on how to use images and movies on your website.

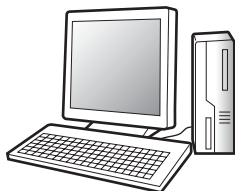

ACDSee for PENTAX p.25-64

- View images
 - Play back movies
 - Print images
 - Edit images and movies
 - Organize and save images and movies
 - Send images and movies by e-mail
 - Post images and movies on a website
- These operations also can be performed using commercially available image editing software. See the instructions provided with the software for more details.

Use your printer



You can use your printer to print images transferred to your computer.

Some printers can print directly from cards.

- For details, see the operating manual of the printer you are using.

Save your image data

Images transferred to the computer can be saved onto a CD-R or other media.



Preparations for Enjoying Your Digital Camera Pictures and Movies

You can transfer images and movies captured with a digital camera to your computer and then organize, edit, print, and share them by installing the software recorded on the provided CD-ROM to your computer and connecting your digital camera to your computer with the USB cable. This section explains how to install the provided software “ACDSee for PENTAX” and the other necessary preparations for enjoying your digital camera pictures and movies on your computer.

Software Provided

The following software is included in the CD-ROM (S-SW23) provided.

Windows

- ACDSee for PENTAX (Image viewing/editing software)
- ACD FotoCanvas (Image editing software)
- ACD photostitcher (Panorama image editing software)
- FotoSlate (Image layout and printing software)
- ACD Showtime! for PENTAX (Movie editing software)
- QuickTime 6
- DirectX 9.0

Macintosh

- ACDSee for PENTAX (Image viewing software)
- ACD photostitcher (Panorama image editing software)



Use the USB cable (I-USB17) provided to connect the camera to your computer.

System Requirements

The following system requirements must be met for you to fully enjoy the images and movies captured with a digital camera on your computer.

Windows System Requirements



- The software cannot be used on Windows 95.
- USB port 1.1 connection is possible to playback images but frame skipping may occur when playing back movies. If a movie does not play back smoothly, transfer the data to your computer and then play the movie.

● USB connection

- OS: Windows 98/98SE/Me/2000/XP (Home Edition/Professional) (USB driver must be installed on Windows 98/98SE)
- USB port must be standard equipment (USB port 2.0 recommended)

● Application Software

<ACDSee for PENTAX, ACD FotoCanvas, ACD photostitcher and FotoSlate>

(9 languages: English, French, German, Spanish, Italian, Russian, Chinese [traditional and simplified], Korean, Japanese)

- OS: Windows 98SE/Me/NT/2000/XP (Home Edition/Professional)
- CPU: Pentium or higher recommended
- Memory: 64MB minimum
- Hard Disk space: 40MB minimum
- Display adapter capable of displaying a minimum of 256 colors
- Internet Explorer 5.5 or later
- * Some formats may require viewing with QuickTime 6.0 or later and DirectX 9.0 or later.
- * To install ACDSee for PENTAX, Windows Installer Service Version 2.0 may be required.
- * ACD Showtime! for PENTAX is also installed when performing standard installation of ACDSee for PENTAX (if ACD Showtime! for PENTAX meets system requirements).

<ACD Showtime! for PENTAX>

(6 languages: English, French, German, Spanish, Italian, Japanese)

- OS: Windows 98SE/Me/NT/2000/XP (Home Edition/Professional)
- CPU: Pentium III 500MHz or higher (Pentium 4 2.0GHz or higher recommended)
- Memory: 128MB minimum (512MB or higher recommended)
- Hard Disk space: 50MB minimum
- Display adapter capable of displaying a minimum of 256 colors
- Internet Explorer 5.5 or later
- QuickTime 6.0 or later
- Windows Media Player 7.1 or later (Windows Media Player 9.0 or later recommended)
- DirectX 9.0 or later

<QuickTime 6>

(8 languages: English, German, French, Spanish, Italian, Japanese, Chinese (Traditional, Simplified), Korean)

- OS: Windows 98/98SE/Me/NT/2000/XP (Home Edition/Professional)
- CPU: Pentium or higher recommended
- Memory: 128MB minimum
- * QuickTime 6.0 or later is required to play movies with the provided software ACDSee for PENTAX or ACD Showtime! for PENTAX
- * Operation is not guaranteed on all PCs meeting the system requirements.

The versions of Internet Explorer, Windows Media Player and Windows Installer Service required for use of ACDSee for PENTAX and ACD Showtime! for PENTAX are not included in the provided CD-ROM (S-SW23). These can be downloaded from the following sites and installed.

- Internet Explorer
<http://www.microsoft.com/windows/ie/default.msp>
- Windows Media Player
<http://www.microsoft.com/windows/windowsmedia/>
- Windows Installer Service
<http://support.microsoft.com/default.aspx?scid=kb;EN-US;292539>

Macintosh System Requirements



- The software cannot be used on Mac OS 8.6 or lower.
- USB port 1.1 connection is possible to playback images but frame skipping may occur when playing back movies. If a movie does not play back smoothly, transfer the data to your computer and then play the movie.

● USB connection

- OS: Mac OS 9.2/10.1-10.3
- USB port must be standard equipment
- * Installation of the driver is not necessary.

● Application Software

<ACDSee for PENTAX and ACD photostitcher>

(6 languages: English, French, German, Spanish, Italian, Japanese)

- OS: Mac OS 9.2 or higher (requires QuickTime 6.0 or higher and the latest version of CarbonLib)
- CPU: PowerPC 266MHz or higher
- Memory: 8MB minimum
- Hard Disk space: 6MB minimum
- * The classic system is necessary when using ACD photostitcher with Mac OS X or higher.
- * Operation is not guaranteed on all Macintosh computers meeting the system requirements.

Installing the Software (for Windows)

The procedures for installing the necessary software are explained.



When multiple accounts have been setup in Windows 2000 or Windows XP, log on with an account that has administrative rights before installing the software.

Installing the USB Driver (Windows 98/98SE only)

- 1 Turn on your computer.**
- 2 Insert the CD-ROM (S-SW23) into your CD-ROM drive.**

The PENTAX Software Installer screen is displayed on the desktop.

- **If the PENTAX Software Installer screen does not appear**
Display the PENTAX Software Installer screen by following steps.
 - 1) Double-click [My Computer] on the desktop.
 - 2) Double-click the [CD-ROM Drive (S-SW23)] icon.
 - 3) Double-click [Setup.exe].

- 3 Click your applicable language.**

You can choose the languages from the displayed screen.


A selection screen to install your desired software is displayed.



- 4 Click [USB Driver] on the Software Installer screen.**

The InstallShield Wizard screen will appear.

Follow the instruction on the screen. Complete InstallShield Wizard screen will appear.

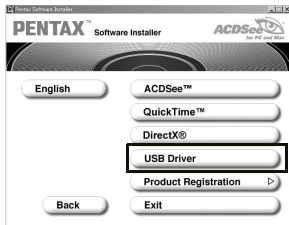


5 Click [Finish].

Reboot your computer after the screen closes.

6 Turn your camera off and plug the provided USB cable into your camera and into an available USB port on your computer.



Confirm that the USB Connection mode is set to [PC] before connecting the USB cable. (p.16)

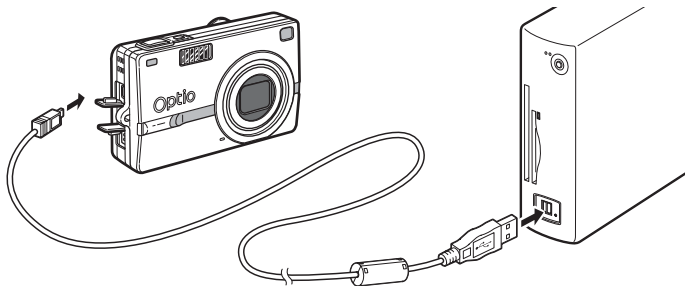

7 Turn your camera on.

Your computer will automatically detect the camera as new hardware and window will display a notification confirming [Hardware Found : PENTAX OPTIO MX] (Windows XP) or [Search for the best driver for your device (Recommended)] (Windows 98/98SE/Me/2000) in the task bar recognized area to begin the installation.

8 Double-click [My Computer] on the desktop.

When the installation is completed, your camera can then be found in the [My Computer] window as [Removable Disk]. Make sure that [Removable Disk] is displayed in the [My computer] window.



If the SD Memory Card has a volume label attached, the volume label name will be displayed instead of [Removable Disk]. If the SD Memory Card is new and has not been formatted, the manufacturer and capacity of the card may be displayed.

Installing the Image Processing Software (ACDSee for PENTAX)

This section describes the procedures for installing ACDSee for PENTAX, which lets you view and edit images transferred to your computer.



When multiple accounts have been setup in Windows 2000 or Windows XP, log on with an account that has administrative rights before installing the software.

- 1 Turn your computer on.
- 2 Insert the CD-ROM (S-SW23) into your CD-ROM drive.
The PENTAX Software Installer screen appears.


- If the PENTAX Software Installer screen does not appear
Display the PENTAX Software Installer screen by following steps.
 - 1) Double-click [My Computer] on the desktop.
 - 2) Double-click the [CD-ROM drive (S-SW23)] icon.
 - 3) Double-click [Setup.exe].

- 3 You can choose the languages from the displayed screen.

The software selection screen appears.



- 4 Click [ACDSee™].

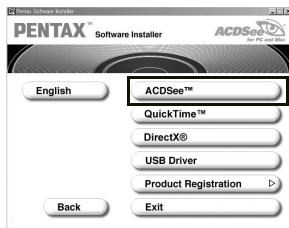

If QuickTime and DirectX are not installed on your PC or old versions are installed, a message informing you to install them from the CD-ROM appears. Click [OK] to first install them. When installing QuickTime or DirectX, other settings are not necessary during installation (leave other settings at default and click [Next]).



Follow the on-screen guidance and enter the registration information when the Setup screen appears. Reboot your PC after installation is finished (Other settings are not necessary during installation).



The panoramic image software “ACD photostitcher”, the image layout and printing software “FotoSlate”, the image editing software “ACD FotoCanvas”, and the movie editing software “ACD Showtime! for PENTAX” are also installed when you install all program features of ACDSee for PENTAX (complete installation).

Product Registration on the Internet


Please click [Product Registration] on the software selection screen in step 4 on page 10 of this PC Connection Manual. A world map for Internet Product Registration is displayed.

If your PC is connected to the Internet, click the displayed country or region and then follow the instructions to register your product.

Thank you very much for your cooperation.



Only customers in displayed countries and regions can register their products on the Internet Product Registration.

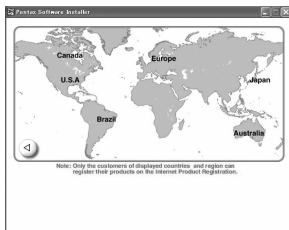

Installing the Software (for Macintosh)

This section describes the procedures for installing the necessary software for Macintosh.

Installing the Image Processing Software (ACDSee for PENTAX)


This section describes the procedures for installing ACDSee for PENTAX, which lets you view and edit images transferred to your computer.

- 1 Turn your Macintosh on.**
- 2 Insert the CD-ROM (S-SW23) in the CD-ROM drive.**
- 3 Double-click the CD-ROM (S-SW23) icon.**
- 4 Double-click the [Install ACDSee™] icon.**

The PENTAX Software Installer screen appears.
Double-click the [Master Installer] icon to display the PENTAX Software Installer screen.

- 5 You can choose the languages from the displayed screen.**

A selection screen to install your desired software appears.

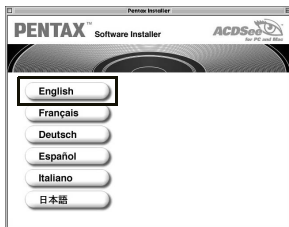


- 6 Click your applicable Mac OS.**

The software selection screen appears.



7 Click [ACDSee™].

The setup screen appears. Follow the on-screen guidance to input registration information and install the software.

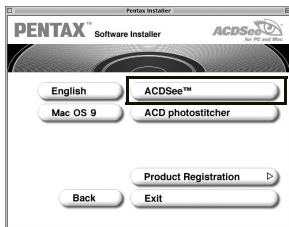

If the message [CarbonLib-xxxxx could not be found] appears during installation;

You must add the extension file “CarbonLib” to the Extension folder in the System folder in order to install the provided software in Mac OS 9.2.

This error message appears when this extension file does not exist or when an older version of the file exists.

The latest version of the CarbonLib file is available on the Apple website. Download the file and then install it.

Apple website: <http://www.apple.com>


* Contact Apple for detailed information on how to use the CarbonLib file.

Installing ACD photostitcher

This section describes the procedures for installing ACD photostitcher, a software application that lets you join a number of images together to form a panorama picture.

1 Double-click [ACD photostitcher].

The licensing agreement appears on the screen. After reading it, click [Agree] to accept the terms of the agreement.

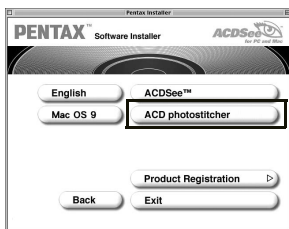


2 Select [Install Location] and click [Install].

Installation starts. When the message appears telling you that the software has been successfully installed, click [Quit].



Product Registration on the Internet

Please click [Product Registration] on the software selection screen in step 7 on page 14 of this PC Connection Manual. A world map for Internet Product Registration is displayed.

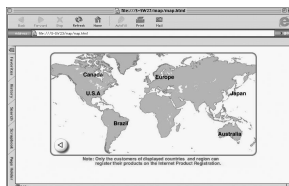

If your PC is connected to the Internet, click the displayed country or region and then follow the instructions to register your product.

Thank you very much for your cooperation.



Only customers in displayed countries and regions can register their products on the Internet Product Registration.

Setting Up Your Digital Camera

After installing the necessary software on your computer, you must now set up your digital camera to transfer images from the camera to your computer.

Setting the USB Connection Mode to [PC]

1 Press the MENU button.


The [📷 Rec. Mode] menu or the [▶ Playback] menu appears.

2 Press the four-way controller (▶) to display the [⚙️ Set-up] menu.

3 Use the four-way controller (▲▼) to select [USB Connection] and press the four-way controller (▶).

4 Use the four-way controller (▲▼) to select [PC].

5 Press the OK button.

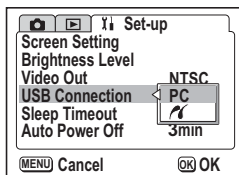

- Do not connect the camera to your PC while [🔌] is selected for the USB Connection mode.
- Do not connect the camera to your PC while [PC] is selected for the USB Connection mode.

Transferring Digital Camera Images and Movies

Once you have made the necessary preparations for using your digital camera pictures and movies with your computer, you can begin transferring pictures and movies to your computer.


Transferring Images to a Windows PC

When the digital camera is connected to your Windows PC and the camera is turned on, the PC automatically recognizes the camera and begins transferring images.

Connecting the Camera and PC

- 1 Turn your PC on.**
- 2 Turn your camera off and connect it to the PC with the USB cable.**

Make sure the SD Memory Card is inserted in the camera.

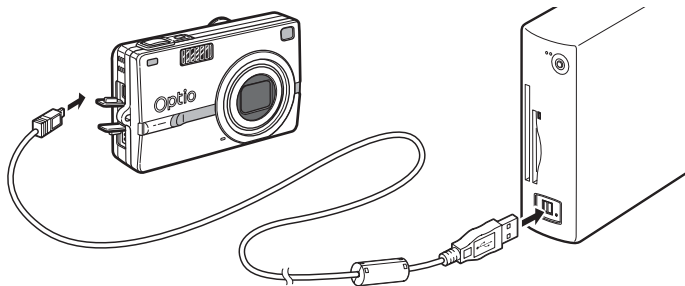

- 3 Turn your camera on.**

The Device Detector screen appears automatically.
If the Device Detector screen does not appear, display and copy the images following the steps in "When the Device Detector screen does not appear" on page 19.




During USB Connection mode, the self-timer lamp lights to show the digital camera is communicating with your computer.




If the digital camera is connected to your computer in [PictBridge] USB Connection mode, the digital camera will not be properly recognized as a storage device. In that case, disconnect the USB cable from your camera and PC, follow the instructions in “Setting Up Your Digital Camera” (p.16) to set the USB Connection mode to [PC], and then reconnect the USB cable.

Transferring Images

4 Confirm that [Copy images to hard drive] and [Launch ACDSee] are checked, and click [Next].

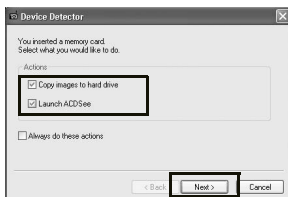


5 Click [Browse].
The [Browse For Folder] screen appears.

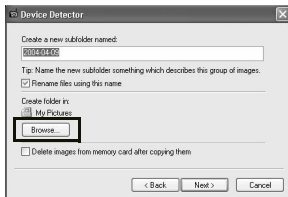

6 Select a destination folder and click [OK].



7 Click [Next].

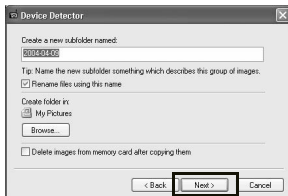

The image is copied to the PC, and the ACDSee for PENTAX Browser (p.26) starts.



The first time ACDSee for PENTAX is run, [Components missing] "ACDSee has detected that you do not have the following software installed on your computer: Ghostscript 7.0 (or later)" may appear. If you will only display or edit images inside the digital camera, it is not necessary for Ghostscript 7.0 to support ACDSee for PENTAX. Click [Close] to close the message window.


When the Device Detector screen does not appear

4 Double-click the [ACDSee for PENTAX] icon on the desktop.




ACDSee for PENTAX

5 Double-click [My Computer].

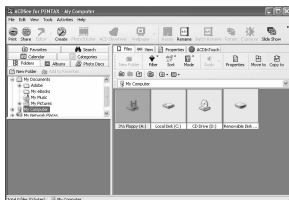


6 Double-click [Removable Disk].

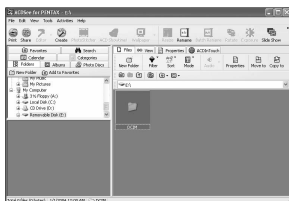


If the SD Memory Card has a volume label, the volume label name appears instead of [untitled]. A new unformatted SD Memory Card may show the manufacturer name or model number.

7 Double-click the [DCIM] folder.

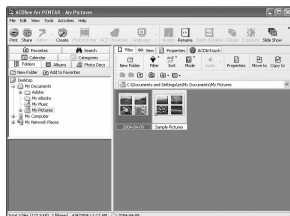


8 Click the [xxxPENTX] folder (xxx is a three-digit number.) or [xxx-yyyy] folder (xxx is a three digit number, yyyy is the date).

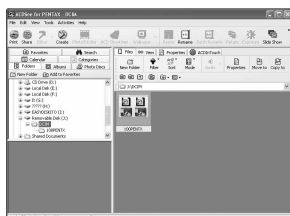


9 Select [Copy To...] from the [Edit] menu.

The Copy Files screen appears.

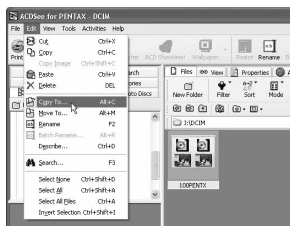

10 Click [More>>] and select the destination folder.

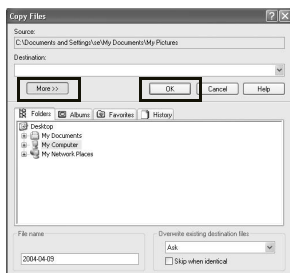

11 Click [OK].

The image is copied to the PC.

Disconnecting the Camera from Your PC

Windows XP

- 1 Double-click the [Safely Remove Hardware] icon in the task bar notification area.
- 2 Click [USB Mass Storage Device] and click [Close].



- 3 Click [USB Mass Storage Device] and click [OK].



- 4 When a message appears indicating that the hardware can be safely removed, disconnect the USB cable from your camera and PC.



Windows 2000/Me


- 1 Double-click the  [Unplug or eject hardware] icon in the task bar notification area.

The [Unplug or Eject Hardware] screen appears.



2 Confirm that [PENTAX USB DISK Device] is selected and click [Stop].

The [Stop a Hardware device] screen appears.

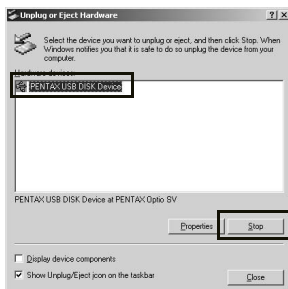

3 Confirm that [PENTAX USB DISK Device] is selected and click [OK].

A message appears.



4 Click [OK].



5 Disconnect the camera from your PC.

Windows 98/98SE

Make sure the status lamp (green) of the camera is not blinking and disconnect the USB cable from your PC.




- If the camera (removable disk) is being used by an application such as ACDSee for PENTAX, the camera cannot be disconnected until the application is closed.
- The camera will turn off automatically when the USB cable is disconnected.

Transferring Images to a Macintosh

Connecting the Camera and Macintosh

- 1 Turn your Macintosh on.
- 2 Turn your camera off and connect it to the Macintosh with the USB cable.

Make sure the SD Memory Card is inserted in the camera.

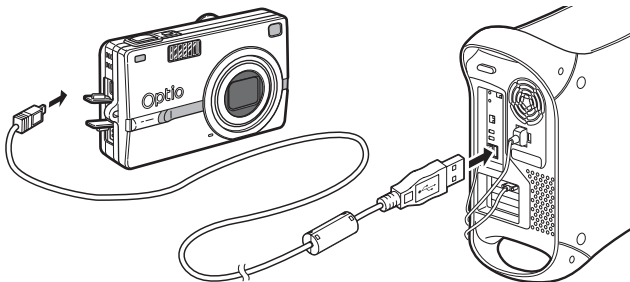

- 3 Turn your camera on.

The camera is recognized as [untitled] ([NO_NAME] in Mac OS X) on the desktop. The folder name can be changed.



- If the SD Memory Card has a volume label, the volume label name appears instead of [untitled]. A new unformatted SD Memory Card may show the manufacturer name or model number.
- During USB Connection mode, the self-timer lamp lights to show the digital camera is communicating with your computer.

Transferring Images

See your Macintosh user's manual for how to copy or move files.



- Even if camera images are not transferred, they can be directly displayed on the Macintosh from a camera connected to the Macintosh. For information on how to directly view the camera images, see p.32.
- To edit images, first transfer them to your Macintosh.

Disconnecting the Camera from Your Macintosh

1 Drag [untitled] on the desktop to the trash.

If the SD Memory Card has a volume label, drag the icon of that name to the trash.

2 Disconnect the USB cable from your camera and your Macintosh.



- If the camera (removable disk) is being used by an application such as ACDSee for PENTAX, the camera cannot be disconnected until the application is closed.
- The camera will turn off automatically when the USB cable is disconnected.

Viewing Images and Movies

You can use ACDSee for PENTAX, the provided software that you just installed, to view and play back images and movies transferred from your digital camera to your computer. This section describes the basic functions of ACDSee for PENTAX for browsing images and movies. For a more detailed description of each function, see the online help (p.63).

Starting ACDSee for PENTAX



The first time ACDSee for PENTAX is run, [Components missing] "ACDSee has detected that you do not have the following software installed on your computer: Ghostscript 7.0 (or later)" may appear. If you will only display or edit images inside the digital camera, it is not necessary for Ghostscript 7.0 to support ACDSee for PENTAX. Click [Close] to close the message window.

For Windows

- 1 Double-click the [ACDSee for PENTAX] icon on the desktop.**

ACDSee for PENTAX starts and an image list (Browser) appears.

For Macintosh

- 1 Double-click the [ACDSee for PENTAX] folder on the desktop.**
- 2 Double-click the [ACDSee for PENTAX] program icon.**

ACDSee for PENTAX starts and an image list (Browser) appears.


To Exit ACDSee for PENTAX

Select [Exit] from the [File] menu in the Browser or the Viewer.

Displaying a List of Images and Movies

The Browser appears when you start ACDSee for PENTAX. The Browser can be used to browse the images on your computer or a connected digital camera as thumbnails (or as a list if the images are small) and play back movies. You can also select the desired method to display lists of images and organize your images for easier identification. This section describes the Browser configuration as well as the names and operation of functions within the Browser.

For Windows

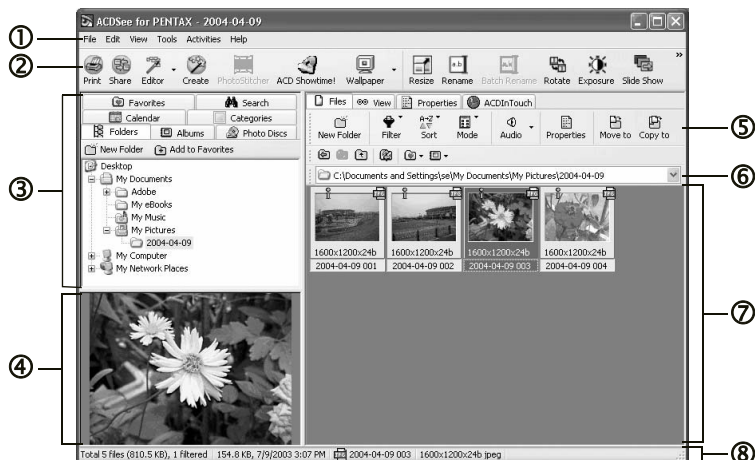

① Menu bar

You can select and execute the various functions and settings of ACDSee for PENTAX by selecting the menu items from the menu bar.

② Browser toolbar

Browser toolbar includes shortcut buttons for commonly used functions and tools. These buttons open dialog boxes or display further command buttons.

You can customize the toolbar for easy use by turning the button labels on or off, adding or removing buttons, and changing the size of the buttons.

③ Navigation pane

Navigation pane displays a folder tree of the folders on your computer, external drive, or peripheral device.

Navigation pane includes the Search, Calendar, Categories, Folders and Photo Discs tabs. You can select these tabs to display their respective contents in the File pane. You can also use the Folders tab in the same way as Windows Explorer to rename, delete, and move folders.

④ Preview pane

Preview pane displays the image selected in the File pane. A movie or audio file selected in the File pane can be played back in the Preview pane.

⑤ File list toolbar

With these shortcut buttons, you can copy, move or delete items, select what file types or folders to display in the File pane, and sort your images.

You can customize the toolbar for easy use by turning the button labels on or off, adding or removing buttons, and changing the size of the buttons.

⑥ Path box

Path box describes the location of the folder of images currently displayed in the File pane.

⑦ File pane

File pane displays the contents of a folder selected in the Navigation pane as a list of files or as thumbnails.

You can sort your images by such criteria as file name, file extension, file size, file date, etc. (p.30)

⑧ Status bar

Status bar displays information and properties for the selected folder or file.



When these categories do not appear, check (☐) the categories you want to display in the [View] menu.

For Macintosh



① Menu bar

You can select and execute the various functions and settings of ACDSee for PENTAX by selecting the menu items from the menu bar.

② Browser toolbar

Browser toolbar includes shortcut buttons for commonly used functions and tools. These buttons open dialog boxes or display further command buttons.

③ Navigation pane

Navigation pane displays a folder tree of the folders on your computer, external drive, or peripheral device.

④ Preview pane

Preview pane displays the image selected in the File pane.

⑤ File pane

File pane displays the contents of a folder selected in the Navigation pane as a list of files or as thumbnails.

You can sort your images by such criteria as file name, file size, file date, etc.

Changing the Browser Display Method

You can choose from any of the following six methods for displaying lists of images in the File pane of the Browser.

Select [Mode] in the [View] menu and then select a display method from the submenu. You can choose from the following display methods.

Thumb+Details

Displays image file thumbnails and file information in a list format. You can change the file information that is displayed. (p.31)

Thumbnails

Displays image file thumbnails.

Large Icons

Displays large icons and file names.

Small Icons

Displays small icons and file names.

List

Displays small icons and file names in a list format.

Details

Displays small icons and file information in a list format. You can change the file information that is displayed. (p.31)



For a Macintosh, you can select [Thumbnails], [Thumbnail List], [Small Icons] or [List] from the [Display] menu.

Changing the Image List Display Method

You can change the order of image files displayed in the File pane.

Selecting sort categories

Select the [View] menu → [Sort] and then select a sort key category from the submenu.

You can choose from the following categories:

Extension, Name, Size, Type, Date, Image Properties, Description

Specifying ascending/descending order

Select [Sort] from the [View] menu and then select [Forward] or [Reverse] from the submenu.



- Clicking the right mouse button on the File pane background (empty area where images are not displayed as thumbnails or icons) displays the menu in the location of the cursor. You can use the same steps to rearrange the image files.
- For Macintosh, you can choose from the following categories: File Name, File Size, Image Type, Date, and Reverse Sort Order.

Sorting using the keyboard

You also can sort image files and specify ascending/descending order using the numeric keypad on the keyboard.

Categories assigned to the numeric keypad:

0: Extension 1: Name 2: Size 3: Type 4: Date

5: Image Properties 6: Description +: Forward -: Reverse



Enable NumLock by pressing the NumLock key on the keyboard when you want to sort using the numeric keypad.

Setting Detailed Display Categories

You can specify items displayed in the list and change the category order when the File pane is set to Details display.

Settings display categories

Select the [View] menu → [Columns] and then select a display category from the submenu.

You can choose from the following categories:

Size, Type, Date, Image Properties, Description

Uncheck the categories for which you do not want to display details.



Clicking the right mouse button on the file list header (area with Name, Size, and other categories) displays the menu. You can use the same steps to set the display categories.

Adjusting the width of the display category row

You can adjust the row width to match the amount of text for each item displayed in the list. Align the cursor with the edge of the row header. Click on the edge when the cursor changes to a left-right arrow and drag the edge to adjust the row width.



Double-clicking the left mouse button on the row header separator automatically adjusts the row width to match the length of the list text.

Selecting a Folder with an Image You Want to View

To view images stored in other folders, select a folder from the folder tree in the Navigation pane of the Browser or directly specify a folder in the path box.

Selecting a different folder in the folder tree

A folder selected from the folder tree is designated as the current folder and images from that folder are displayed in the File pane.

To display a subfolder

 is displayed next to the folder icon of folders that contain subfolders. Click  to display the subfolders.  is displayed next to folders when subfolders are displayed. Click  to hide the subfolders.



- When the digital camera is connected with the USB cable, the camera appears in the Navigation pane as an external drive. The camera appears as [Removable disk] in Windows or [untitled] in Macintosh, or if the SD Memory Card has a volume label name, that name appears. You can view the camera images directly from the Browser by double-clicking the digital camera icon and opening the [DCIM] → [xxxPENTX] folder (xxx is a three-digit number) or [xxx-yyyy] folder (xxx is a three-digit number, yyyy is the date).
- To edit images, first transfer them to your computer.

Use the buttons on the Browser toolbar to select a different folder

You can view the contents of the folder one level above the current folder by clicking  in the Browser toolbar.

You can view the contents of the folder displayed prior to the current folder by clicking  in the Browser toolbar.

Click  to return to the folder displayed before you used  in the Browser toolbar to change the displayed folder.

Specifying a different folder using the Path box

Select [Path Box] from the [View] menu to display the path box in the File pane. Directly enter in the path box the path of the folder containing images you want to view. Images in that folder appear in the File pane. Also, click  to the right of the path box to display a dropdown list containing a history of recently used folders. Select from the list a folder with images you want to view. Images from that folder appear in the File pane.

Viewing a Full-Size Image or Movie

Double-click on an image file from the list on the File pane of the Browser. The image appears at its original size in a window called the “Viewer”. You can also double-click on a movie file (or audio file) to play back that file at its original size or at full screen in a window called the “ACDSee Media Window”.

Displaying a Full-Size Image (Viewer)

This section describes the Viewer configuration as well as names and operations of functions within the Viewer.



① Menu bar

You can select and execute the various functions and settings of ACDSee for PENTAX by selecting the menu items from the menu bar.

② Viewer toolbar

Viewer toolbar includes shortcut buttons for commonly used functions and tools such as the Zoom tools.

You can customize the toolbar for easy use by turning the button labels on or off, adding or removing buttons, and changing the size of the buttons.

③ Viewer pane

Viewer pane displays your images one at a time in full resolution.

④ Status bar

Status bar displays information and properties for the selected, file or files.



When the Viewer is displayed, you can close the Viewer and switch to the Browser by performing any of the following.

- Click the (Close) button.
- Double-click on the Viewer pane border.
- Press the [Esc] key on the keyboard.

Playing Back Movies at Full Size (ACDSee Media Window)

This section describes the ACDSee Media Window configuration as well as names and operations of functions within the ACDSee Media Window.



① Menu bar

You can select and execute the various functions and settings of ACDSee Media Window by selecting the menu items from the menu bar. You can select the image size of the movie from the [View] menu.

② Media Window toolbar

Media Window toolbar includes shortcut buttons for commonly used functions and tools such as for opening movie files. Click [Clipboard] to copy the currently displayed frame of a movie to the clipboard. Click [Properties] to display information of the movie or audio file being played back.

③ Preview pane

Preview pane displays and plays back movies.

④ Operation buttons

Operation buttons are used to play, pause, fast forward, rewind, and control the volume of movies and audio.

Editing Images and Movies

In addition to viewing and playing back images and movies, ACDSee for PENTAX can also be used to edit images and movies to create unique works of art and other creative projects. This section describes the various image and movie editing functions of ACDSee for PENTAX.

Editing Images

You can fix, edit, and stitch together images by using the ACD FotoCanvas image editing and processing software started from ACDSee for PENTAX.

Starting ACD FotoCanvas

To start ACD FotoCanvas, select the image you want to edit in the File pane of the Browser and then select the [Activities] menu → [Edit] → [Editor] → [FotoCanvas].


You can also right-click the image you want to edit and select [Edit] from the menu.

Adjusting the Image Brightness

You can adjust the brightness, contrast, and grayscale of the image.

- 1 From ACD FotoCanvas, open the image you want to edit and click the [Levels] button.**

The [Brightness/Contrast/Gamma] window appears.

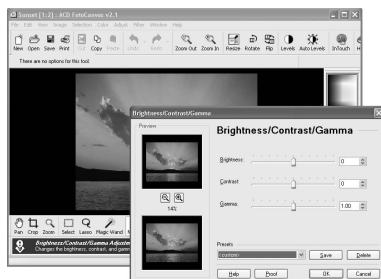

2 Adjust each slider to obtain the desired setting.

[Brightness] controls the overall brightness of the image. [Contrast] controls the difference in brightness between the darker areas and the lighter areas. [Gamma] controls the transition (image grayscale) from the lighter areas to the darker areas.

Adding Text and Color to the Image


Text messages and colors can be added to the image to create an original work of art.

1 From ACD FotoCanvas, open the image you want to edit and select [Airbrush], [Rectangle], [Text], or other tool from the Drawing toolbar.

Select [Tool Options] from the [View] menu to adjust the tool settings.

Color options and
Blend mode

Drawing
toolbar
Tool options

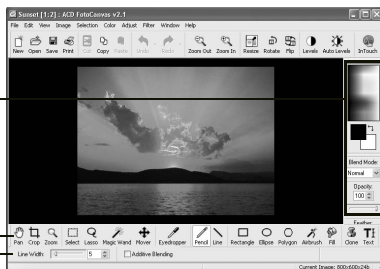

2 Click or drag the mouse cursor over the image to paint or draw shapes or text.

You can use the color options on the upper right-hand side of the window to select the paint, shapes, and text color. You can use [Blend Mode:] to select how color is added to the image (blending method) and the transparency of the color added to the image.

Joining Images

You can add separate pictures or drawings to an image and join them together.

1 Copy a separate picture or drawing

See the operating manual or online help of your imaging software for details on how to copy a picture or drawing.

- 2** From ACD FotoCanvas, open the picture you want to add to your image and select the [Edit] menu → [Paste] → [As a New Selection].

The pasted image appears surrounded by a dotted line. While the image is surrounded by a dotted line, drag the image to the desired position.



- 3** When the image is in the desired position, set [Blend Mode:] and [Opacity:].

Select a method for joining the pasted image with the background image (Blend mode) and the transparency.



- 4** Click outside of the dotted line of the pasted image.

The pasted image is attached to the original image.

Other Useful Functions

This section introduces several other useful functions when using ACD FotoCanvas. See the ACD FotoCanvas online help for more detailed information on the use of these functions.

Red-eye reduction

You can use the [Red-eye Reduction] tool to replace the red glare in the eyes of subjects due to a camera flash with natural eye color.

Clone

You can use the [Clone] tool to copy an area of an image more naturally. By using the Clone tool to copy the background sky, for example, you can easily erase unwanted areas in the image.



Filters

You can choose from a variety of filters in the [Filter] menu to soften an image, distort an image, make an image look like a painting, and create other interesting effects.




Saving an Edited Image

Images edited with ACD FotoCanvas can be saved with various image file formats.

1 Select [File] menu → [Save As...].

2 In the [Save Image As] dialog box, enter the file name in the [File name] field and select the desired file format in [Save as type].

You can select the desired file format from the [Save as type] list.

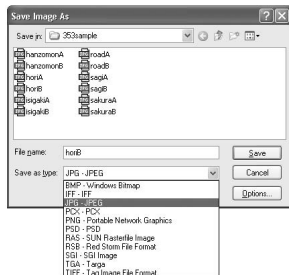

3 Select the destination folder in [Save in] and click [Save].

Panorama Image Stitching

With ACD photostitcher installed on your computer, you can panorama stitch the images you took in Panorama Assist mode.

The folder and image names displayed on the explanatory screenshots will differ according to the setup of your computer.



- If you are using a Macintosh, install ACD photostitcher and ACDSee for PENTAX separately. (p.14)
- Panorama stitching cannot be performed on images of varying recorded pixels.

Panorama Image Stitching on a Windows PC

1 Start ACDSee for PENTAX.


An image list is displayed.

2 Select the images for panorama stitching from the image list.

Press the [Ctrl] key on the keyboard while clicking on pictures to select multiple images.

After selecting the images, select [Extras] from the [Activities] menu, and select [PhotoStitcher] from the submenu.

The [PhotoStitcher] is not enabled if two or more images are not selected.

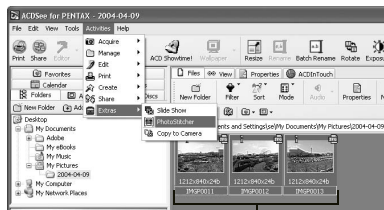


Select images

3 Adjust the image positioning.

ACD photostitcher starts, and the selected images appear in panorama format.



Move the mouse pointer over the image. It changes into a  symbol. Hold down the left mouse button and drag the images to adjust the stitching position (A).

After the position has been adjusted, click the [STITCH] button (B).

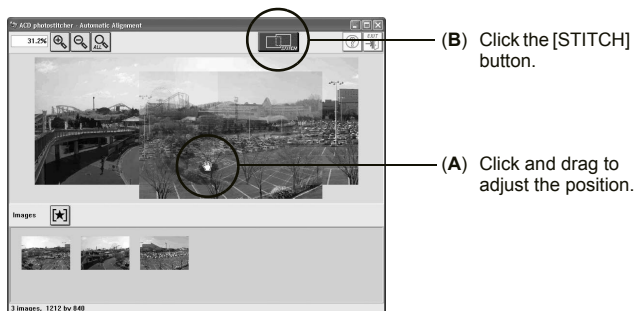

4 Select the stitching method.

You can choose from [Big Plane] or [Cylinder] for the stitching method. Here, you will create a flat panorama. Click the [Big Plane] button. A confirmation message appears. Click [OK].

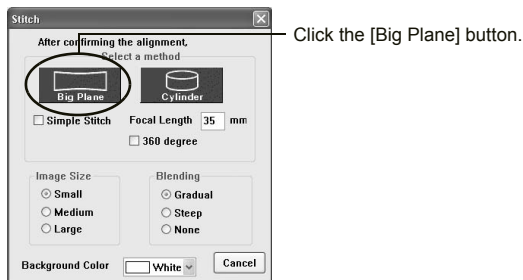


If a message like the one shown on the left appears, click [OK] to continue.

5 Trim the image.


Move the mouse pointer over the dotted lines. It changes into a $\updownarrow$ symbol. Hold down the left mouse button and drag the dotted lines to adjust the image trimming position (A).

After the position has been adjusted, click the [Trimming] button (B).

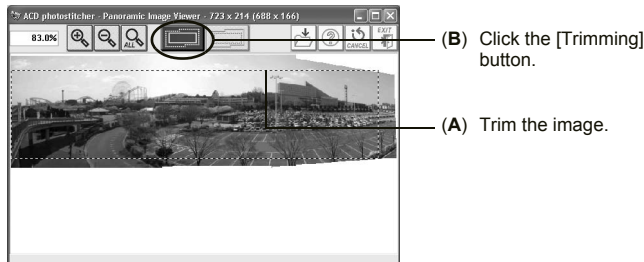

6 Save the image.

After confirming the trimming, click the [Save] button to save the image. To cancel the trimming, click the [Cancel Trimming] button.

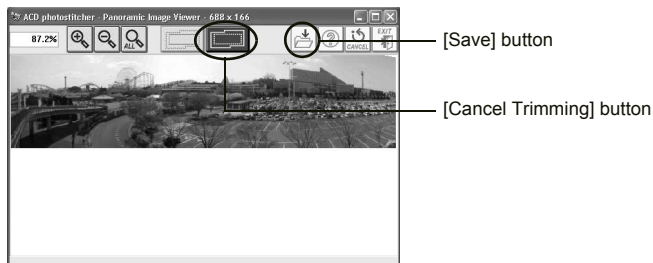

Panorama Image Stitching on a Macintosh

1 Start ACD photostitcher.

2 Click the [Load] button in the window 1.


The folder selection screen appears.

3 Select the folder for panorama stitching, and then click the [Select] button.

The image files in the selected folder appear (A).

4 Select all the images for panorama stitching in the window 1, and then click the [Select images] button.

The selected images appear on the image layout palette in the Alignment window (window 2) (B).

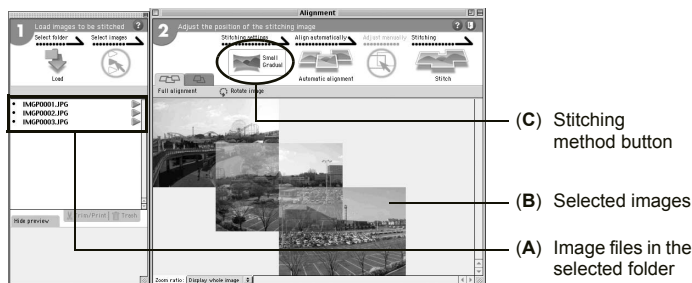


5 Set the stitching parameters.

Click the Stitching method button in the window 2 (C) to open the stitching parameter selection window.

You can choose from [Big Plane] or [Cylinder] for the stitching method. Here, you will create a flat panorama. Click the [Big Plane] button and [OK].

6 Click the [Automatic alignment] button.


The selected images appear in panorama format.

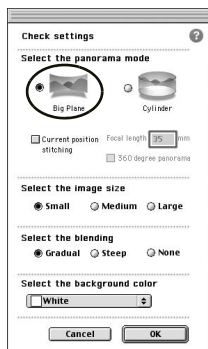

7 Adjust the image positioning.

In the window 2, click an image you want to move, and then the image is framed in red and able to move. Hold down the mouse button and drag the image to adjust the stitching position.

For easier adjustment of two adjacent images, click the [Align 2 images] tab to enlarge the section where the images overlap.

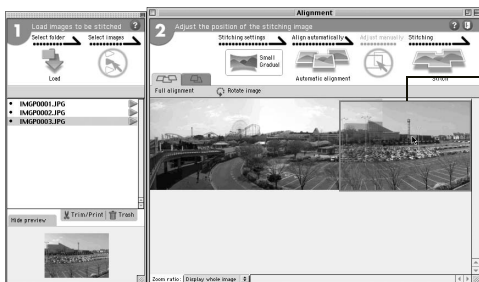

Hold down the mouse button and adjust the stitching position.

8 Click the [Stitch] button.

Stitching starts. When finished, the stitched picture is displayed.


9 Trim the image.

Click the [Trim] button in the Stitching result window to display the dotted lines around the image (A).

Move the mouse pointer over the dotted lines. It changes into a $\updownarrow$ symbol. Hold down the mouse button and drag the dotted lines to adjust the image trimming position (B).

After the position has been adjusted, click the [Trim] button again (C). To cancel the trimming, click the [Undo] button.

After confirming the trimming, click the [OK] button (D).

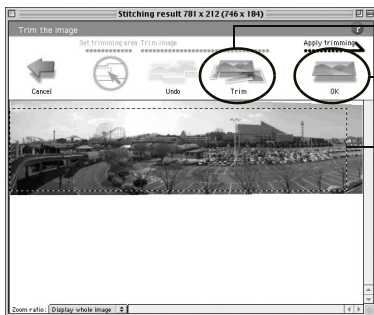

(A) Click the [Trim] button.

(C) Click the [Trim] button.

(D) Click the [OK] button.

(B) Trim the image.

10 Save the image.

Click the [Save] button in the Stitching result display window (window 3) to save the image.



Editing Movies

You can use ACD Showtime! for PENTAX to edit together movies captured with a digital camera. You can also put together still pictures with other still pictures or movies to create your own story with a time line.




ACD Showtime! for PENTAX is for Windows only (a Macintosh version is not included with the camera).

Starting ACD Showtime! for PENTAX

ACD Showtime! for PENTAX can be started from the Start menu, desktop icon, or ACDSee for PENTAX.

1 Select the ACDSee for PENTAX [Activities] menu → [Create] → [ACD Showtime!].

The ACD Showtime! for PENTAX startup window appears.

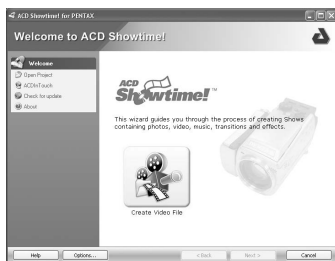

When an image or movie file is selected in the File pane of ACDSee for PENTAX and the [Activities] menu → [Create] → [ACD Showtime!] is selected, ACD Showtime! for PENTAX starts and the file is loaded.



Creating Projects

In ACD Showtime! for PENTAX, a project defines the method for editing together movies and still pictures as well as the display and playback time settings. To begin using ACD Showtime! for PENTAX, first create a new project.

1 In the ACD Showtime! for PENTAX startup window, click [Create Video File].

A new project is created and the [Edit Show] window appears.



In the [Edit Show] window, you can also click [New] from the [Project] menu on the left sidebar to create a new project. The project currently opened in the [Edit Show] window closes. If the project has not been saved, a prompt appears asking if you want to save it.

Adding and Sorting Video, Images, Music and Other Audio


With ACD Showtime! for PENTAX, you can add video, images, and music or other audio and then rearrange the order for display or playback to create your own show.

1 From the [Show] menu on the left of the window, click [Add Video], [Add Image], or [Add Music/Audio].

The [Add Video (Image, Music/Audio)] dialog box appears. Select the video, image, or music/audio file you want to add to the project and click [Open].



You can also add files by dragging and dropping them from ACDSee for PENTAX or the desktop into the [Edit Show] window.

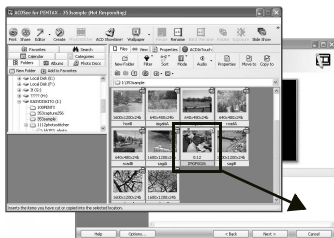


The area in the [Edit Show] window where video, images, and music/audio files can be rearranged is called the Timeline.

2 Drag and drop video and images and rearrange them.



When loading an audio track, you can drag the audio track to the point in the Timeline where you want the audio to begin playback.

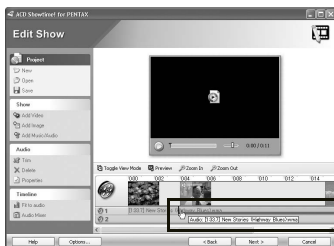

To display the audio tracks, click the [Toggle View Mode] button.

3 Click the [Preview] button.

The show you are editing is played back in the preview area.



Editing Video


You can select a movie file in the [Edit Show] window and add special effects or change the playback time.

1 Select the video to edit.

The [Video] menu appears on the left sidebar of the [Edit Show] window.

2 Select [Effects] or [Trim] from the [Video] menu.

Select [Effects] to create various special effects and image corrections, such as blurring or embossing of the image.

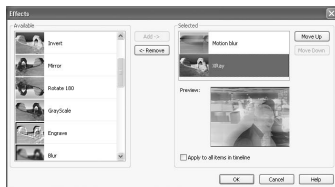

Select [Trim] to specify the playback time of a movie in a show.



Editing Images

You can set the display time, enlarge an area of an image, add special effects, and perform other editing for still pictures loaded to a project.

1 Select the image to edit.

The [Image] menu appears on the left sidebar of the [Edit Show] window.



2 Select and set an edit function.

You can select from the following editing functions in the [Image] menu.

- | | |
|--------------------|--|
| Rotate/Flip | Rotates the image 90 degrees or flips the image vertically or horizontally. |
| Crop | Cut an area of the image and enlarge the image. |
| Duration | Set the length of time the image is displayed in milliseconds. |
| Effects | Apply special effects, such as embossing, and image corrections, such as gamma correction. |


Transitioning between Scenes

When transitioning between movies and images loaded to the timeline, you can use various effects, such as the overlapping of images and fading in and out. These effects are called “transitions”.

1 Click the [Toggle View Mode] button.

The timeline changes to the display shown on the right.

Transition

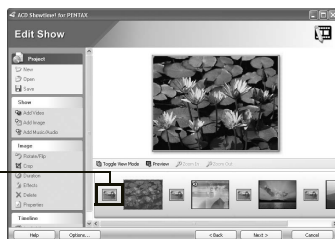

2 Select a transition.

Click and select a Transition.


The [Transition] menu appears on the left sidebar of the [Edit Show] window.



3 Click [Transitions] from the [Transition] menu.

The transition selection dialog box appears.

Select a transition and click [OK].

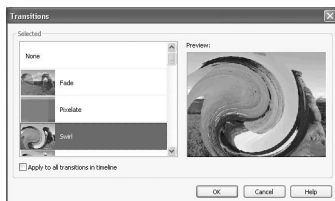

4 Click [Duration] from the [Transition] menu.

The [Transition Duration] dialog box appears. Set the transition duration in milliseconds by adjusting the slider.

The actual transition effect and

duration can be previewed by clicking the [Preview] button to play back the show.




Editing Audio

You can adjust the playback time and the volume balance of music and other audio added to the timeline in the [Edit Show] window.

Setting the playback time of music/audio

1 Click the [Toggle View Mode] button to display the audio tracks in the timeline.

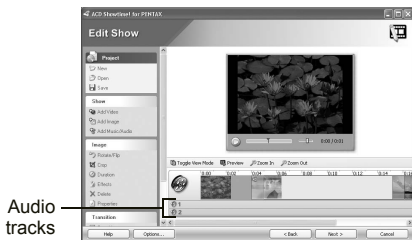

2 Select the audio track to edit.


The [Audio] menu appears on the left sidebar of the [Edit Show] window.



3 Click [Trim] from the [Audio] menu.

4 Specify the playback time of music/audio by setting the starting and ending points in the [Trim] window.

Click the Play button to preview the adjusted starting time and playback time.

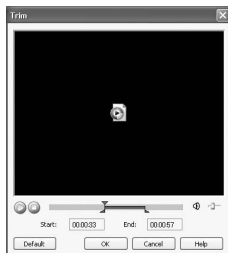

Synchronizing the music/audio starting time with the movie or image starting time

When there are multiple movies or images on the timeline, you can select from which movie or image starting point to start playback of the music/audio.

1 Click the right mouse button on an audio track in the timeline.


2 From the [Snap to] menu, select [Start], [Previous], [Next], or [End].

Start Begins playback at the beginning of the timeline.

Previous Begins playback at the beginning of the previous movie or image.

Next Begins playback at the beginning of the next movie or image.

End Begins playback at the beginning of the last movie or image.

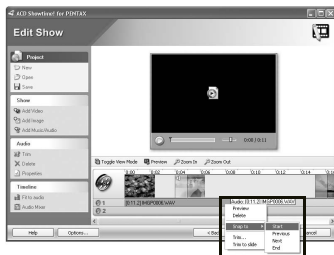

Music and other audio on an audio track can be dragged to the desired starting position.


Synchronizing with movies and images

The playback time of music/audio can be shortened to synchronize with the length of a movie or image that has the same starting point.

1 Click the right mouse button on an audio track in the timeline.

2 Select [Trim to slide] from the menu.

The playback time of music/audio is shortened to synchronize with the length of the movie or image that has the same starting point.

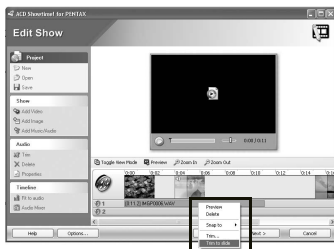


Select [Fit to audio] from the [Timeline] menu to synchronize the length of the entire show with the playback time of music/audio added to an audio track. This is helpful, when you want to create a slideshow that is synchronized with a song.

Adjusting the volume balance

You can adjust the volume balance between the audio on a movie and audio tracks 1 and 2.

- 1 Click **[Audio Mixer]** from the **[Timeline]** menu on the **[Edit Show]** window.
- 2 Adjust the volume balance in the **[Audio Mixer]** window.

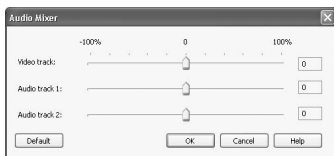

To mute the audio on a movie, click the right mouse button on the movie in the timeline and select **[Mute Embedded Audio]** from the menu.


Saving a Project/Video

A project edited in the **[Edit Show]** window contains important information about how the movies, images, and audio data for that project are mixed together. Make sure to save your project often. The completed show can be saved as a digital video file with a format such as Windows Media Video, AVI, or MPEG-1.

Saving a project

- 1 Click **[Save]** from the **[Project]** menu on the **[Edit Show]** window.

The **[Save As]** dialog box appears. Enter the file name and select the save destination, and then click the **[Save]** button to save the project.

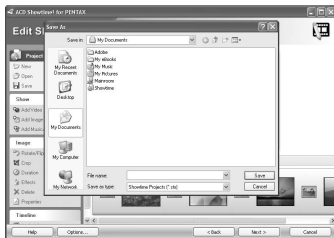



Once you have saved the project with [Save As], thereafter you can overwrite the project by clicking [Save] from the [Project] menu.



You can also save a project in the [Save Video/Project] window explained below.

Saving a video

1 Click [Next >] at the bottom right of the [Edit Show] window.

2 The [Save Video/Project] window appears. Select the [Format] and [Output file name] in [Save video].

By default, the output file is set to save the video to the [My Documents] folder.

When selecting the [Output file name], only change the [untitled.wmv] portion of the file


name so as not to lose the save destination later on.

Be careful not to delete or incorrectly change the file extension (.wmv), as your computer may not be able to recognize the video file. If you accidentally delete or change the file extension, select the video file format from [Format] to automatically assign the appropriate file extension to the file name.

3 Click [Next >].

The video is saved.

You can also use the [Save Video/Project] window to save a project by making the settings in [Save project] in step 2 above.

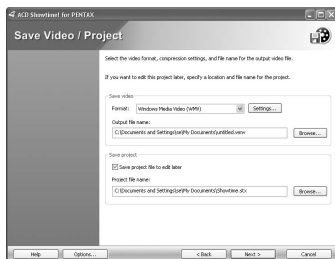

Sharing Your Images and Movies

You can print image files from the ACDSee for PENTAX Browser or the Viewer. You can also send images by e-mail, playback a show on a computer edited using ACD Showtime! for PENTAX, or share your original works in a variety of ways.

Printing an Image

Printing from the Browser

You can print images from the Browser.

- 1 Select one or more images.**
To print several images, hold the [Ctrl] key on the keyboard while clicking on all the pictures you want to print.
- 2 Select [Print Images] from the [File] menu.**
The Print dialog box is displayed.
- 3 Select or change the printing options.**
- 4 Click [Print].**

Creating and Printing Contact Sheets

You can create and print contact sheets (thumbnails) of your images. You can add captions to each image, page headers and footers, and change the size of images.

- 1 In the Browser, select a group of images.**
Hold the [Ctrl] key on the keyboard while clicking on all the pictures you want to print.
- 2 Select [Print Contact Sheet] from the [File] menu.**
The Print Contact Sheet dialog box is displayed.
- 3 Select or change the printing options.**
- 4 Click [OK].**



For more information about creating and printing contact sheets, click the Help button in the Print Contact Sheet dialog box.

Printing from the Viewer

You can print the currently viewed image, or all images that reside in the same folder as the currently viewed image.

1 Select [Print Image] or [Print All Images] from the [File] menu.

Select [Print Image] to print the currently viewed image.

Select [Print All Images] to print all images that reside in the same folder as the currently viewed image.

The Print dialog box is displayed when either is selected.

2 Select or change the printing options.


3 Click [Print].

Inserting the Date and Printing Images

You can insert the date into an image file and print it. Date insertion settings are done in the Print dialog box.

1 Select the [Caption] tab in the Print dialog box.

2 Check the [Print image capture date in the corner of images] check box.

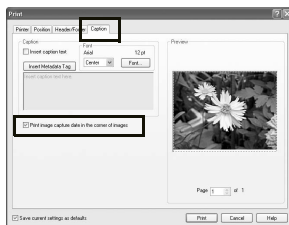

Arranging and Printing Pictures

With the FotoSlate software provided with ACDSee for PENTAX, you can layout pictures on a board, add text, and print the pictures. Here is an easy introduction to using FotoSlate.




FotoSlate is for Windows only (a Macintosh version is not included with the camera).

- 1 Select the image you want to use for a layout in ACDSee for PENTAX and select the [Activities] menu → [Print] → [FotoSlate].**

The [FotoSlate] window appears.




- 2 Click [Add Page] from the toolbar of the [FotoSlate] window.**

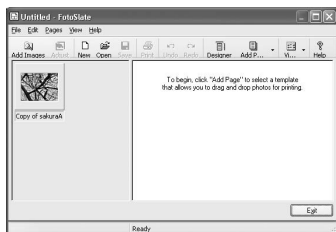


- 3 Select the template you want to use for the layout from the [Add Page] window.**

Select a category from the tree list on the left-hand side of the window and a thumbnail of a template displayed on the right-hand side, and click [OK].

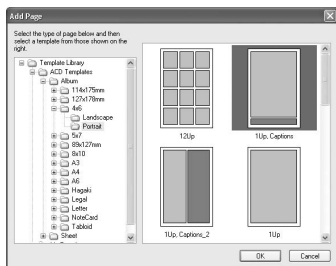


4 Drag the image to the template.

Drag and add the image on the left-hand side of the window to the template displayed on the right-hand side.

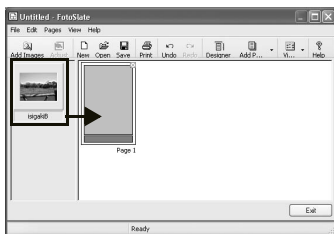

5 Enter text.

The area of the template indicated in dark gray is the space where text can be entered. Double-click this area to display the [Enter Text] window and then enter the text. The font, size, text color, and orientation can be selected.

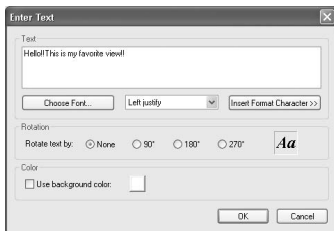

6 Print the image.

Click the [Print] button on the toolbar.

The Print dialog box appears. Set the printing range (which pages to print if there are multiple pages) and number of copies, and then click the [OK] button to print the image.



E-mailing Your Images from ACDSee for PENTAX

You can send images directly from ACDSee for PENTAX without using an external e-mail application.

Image files are converted to JPEG format then attached to an e-mail and sent. Images are compressed before transmission when the file size is large, but no changes are made to the original image.

E-mail account setup is required to send images by e-mail. See the ACDSee for PENTAX Help section for details. (p.63)



The e-mail function of ACDSee for PENTAX is not compatible with Macintosh.

1 In the Browser, select an image or a group of images.


To select several images, hold the [Ctrl] key on the keyboard while clicking on all the pictures you want to send.

2 Select [Share] from the [Activities] menu, then select [E-mail].

The Send E-mail dialog box is displayed.

3 Input the required information.

4 Click [Send].

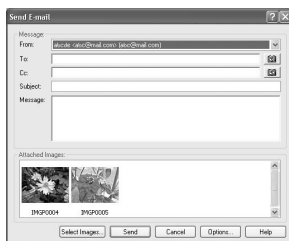

An error message may be displayed and you may not be able to send mail if your mail server security is set to a high level.

Playing Your Movies Created with ACD Showtime! for PENTAX

Movies (video files) created with ACD Showtime! for PENTAX can be played on your computer. Here is an easy introduction to playing movies on your computer.

Playing Back Movies with ACDSee for PENTAX

- 1 Use the Navigation pane to locate the movie you want to play.
- 2 In the File pane, click and select the displayed thumbnail of the movie you want to play.
- 3 Click the play button in the Preview pane.
Playback of the movie begins.



You can double-click the thumbnail of a movie in the File pane to open the ACDSee Media Window (p.34) and play back the movie at full size or full-screen size.

Playing Back Movies with Video Software Supplied with a Computer

The video software supplied with a computer can be used to play back movies when ACDSee for PENTAX is not installed, for example, when your friend wants to play back a movie that you created on your computer.

Boot the video software, and select the video file you want to play by selecting the [File] menu → [Open], then begin playback.



If you are creating a movie for playback by Macintosh computers, save the file in QuickTime format. For more information, see “Saving a Project/Video” (p.55).

Making the Most of ACDSee for PENTAX

ACDSee for PENTAX comes with many other features to allow you to enjoy using images and movies with your computer. This section introduces some interesting additional features and how to find help with operations of ACDSee for PENTAX.

Using Help

ACDSee for PENTAX and the provided software come with online help that explains how to use the software and provides information about the various functions. Be sure to use the online help if you have problems operating the software.

Searching for Information

1 Select **[Search Topics]** from the **[Help]** menu.

The [Help] window appears.

- 2 Select the [Contents], [Index], or [Search] tab to search for the item you are looking for.

To directly find the item you are looking for, enter the phrase you want to find in the [Search] tab, and click the [Start Search] button.



Useful Tips

1 Select the [Help] menu → [Tip of the Day].

2 [Did you know...] appears.

Tips on how to use the software appear randomly. Click [Next Tip] to display the next new topic. Use this to look for some interesting tips.



About ACDInTouch

ACDInTouch is an Internet-based service that provides the latest information about ACDSee™. You can obtain information about special offers and free digital imaging materials as well as subscribe to the latest news and tips.

Connecting to ACDInTouch

1 Select [ACDInTouch] from the [Help] menu.

The Connect to ACDInTouch dialog box is displayed.

2 Click [Connect Now].

About the ACDInTouch Services

ACDInTouch is a service for sending information directly to ACDSee for PENTAX. When you connect, information is sent to you so that you can read up-to-date information directly in the ACDInTouch pane. This information is relevant to your product, such as upgrades, add-ons and related software from ACDSYSTEMS™ that may also be of interest to you.

Memo

PENTAX Corporation

2-36-9, Maeno-cho, Itabashi-ku, Tokyo 174-8639, JAPAN
(<http://www.pentax.co.jp/>)

**PENTAX Europe GmbH
(European Headquarters)**

Julius-Vosseler-Strasse, 104, 22527 Hamburg, GERMANY
(HQ - <http://www.pentaxeurope.com>)
(Germany - <http://www.pentax.de>)

PENTAX U.K. Limited

PENTAX House, Heron Drive, Langley, Slough, Berks
SL3 8PN, U.K.
(<http://www.pentax.co.uk>)

PENTAX France S.A.S.

PENTAX Benelux B.V.

12/14, rue Jean Poulmarch, 95106 Argenteuil Cedex, FRANCE
(for Netherlands)
Spinveld 25, 4815 HR Breda, NETHERLANDS
(<http://www.pentax.nl>)
(for Belgium & Luxembourg)
Weiveldlaan 3-5, 1930 Zaventem, BELGIUM
(<http://www.pentax.be>)

PENTAX (Schweiz) AG

Widenholzstrasse 1 Postfach 367 8305 Dietlikon, SWITZERLAND
(<http://www.pentax.ch>)

PENTAX Scandinavia AB

P.O. Box 650, 75127 Uppsala, SWEDEN
(<http://www.pentax.se>)

PENTAX Imaging Company

A Division of PENTAX of America, Inc.

(Headquarters)
600 12th Street, Suite 300 Golden Colorado 80401, U.S.A.
(Distribution & Service Center)
16163 West 45th Drive, Unit H Golden, Colorado
80403, U.S.A. (<http://www.pentaximaging.com>)

PENTAX Canada Inc.

1770 Argenta Road Mississauga, Ontario L5N 3S7, CANADA
(<http://www.pentaxcanada.ca>)



for your
precious moments

<http://www.digital.pentax.co.jp>

- Specifications and external dimensions are subject to change without notice.